


LAY SOD IN A STAGGERED PATTERN WITH STRIPS BUTTED TIGHTLY AGAINST EACH OTHER

ON SLOPE > 3:1 USE PEGS OR STAPLES TO FASTEN SOD FIRMLY AT THE CORNERS AND CENTERS.

### INSTALLATION OF GRASS SOD

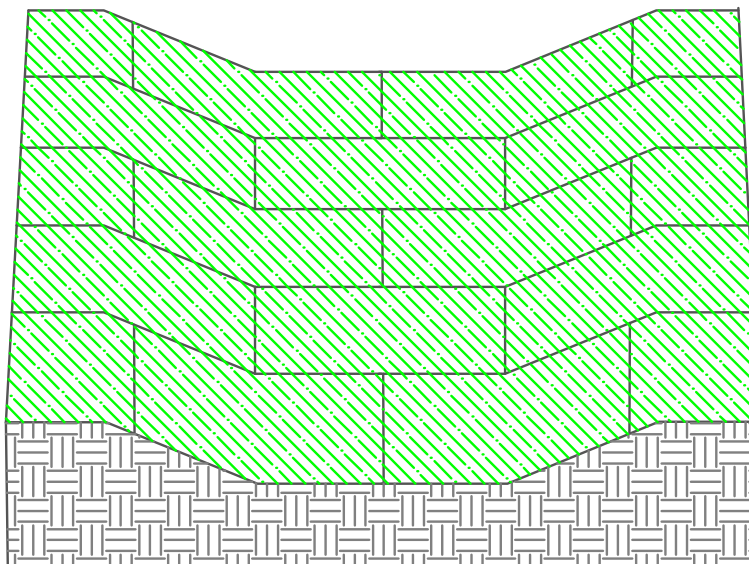

LAY SOD PERPENDICULAR TO THE DIRECTION OF FLOW. USE PEGS OR STAPLES TO FASTEN SOD FIRMLY AT THE CORNERS AND CENTERS

### INSTALLATION OF SOD IN WATERWAYS

Modified from Chesterfield, Missouri Model BMPs for Land Disturbance

NTS

City of Springfield, Missouri



Department of Public Works  
Storm Water Services Division

***SODDING***

Figure: EC-9  
Issued: 10-01-2008  
Revised: